

Ravel manual

Ravel is a custom firmware for the M-VAVE FM-1 that turns the FM-1 into a pocket groovebox for sound design. It has 8 tracks that synthesize, catch what they play onto a shared tape, cut it up & rebuild it with tracks that can play, excite, and reshape one another

Status: playable in the emulator; the FM-1 firmware builds, but has not been run on an FM-1 yet. The whole instrument runs in the browser emulator and the desktop simulator, from the same C sources the firmware is built from. The FM-1 firmware is bare metal (no vendor SDK) on the open hardware layer of the Felucca family of community firmwares, and installs from a web installer over USB. Until it has been tried on hardware, treat it as experimental.

What it is

- **Synth tracks** (T1 to T4), six engines: **VA** (saw to pulse, supersaw, sync, sub, noise, through-zero FM), **PD** (Casio-style phase distortion, 8 waves, foam sidebands, ring), **FM** (4 operators, 12 algorithms, a wave per operator), **PHYS** (string, bowed, blown, membrane), **FORMANT** (vowel filter bank or FOF grains), **PARTICLE** (pulsar emitters that pull into sync).
- **Strike tracks** (T5, T6): an exciter (click, noise, metal, FM burst, dust, rain, bow, breath, or the audio input) strikes a body (ping filters, modal bars, a struck disc or coupled strings), with a transient layer, ring mod and a pitch drop.
- **Tape tracks** (T7, T8): no oscillator. They play the shared 120 KB capture tape as **MLR** playheads (four rows, jumps on the keys, rates from $-2\times$ to $4\times$), through the **Beads** grain engine, or as **slices** found in what was caught.
- **Capture tape**: records the master, one track, the buses or the audio input. **Catch** keeps what is on it, **resample** records a bar (or 2 or 4) onto row 1 on the downbeat, erosion and "dirty" half-rate μ -law for more time.
- **Influence**: an 8×8 grid where any track can modulate, trigger, excite, ring, jump the tape of, or clock any other.
- **Articulation**: onset, continuant and termination stages with curve, overshoot, a loop, a tail and **Give** (a spring that lets the level lag and bounce), two destinations, and a 256-shape envelope library that steps can recall.
- **Sequencer**: each track runs in **STEPS** or **GRAPH** mode. Steps: length, rate and direction, parameter locks, microtiming, ratchets with curves, conditions, chance. Graph (from Silt): cords set where a playhead goes next, two playheads walk the same graph, each playing notes, only the gate, or only the pitch (so rhythm and melody can take different paths), head 2 can play another track, and each head has a function generator (rise, fall, arch, decay, swell, or an LFO or dust) that moves its speed, times or plus the clock. Plus density arcs, a sieve, scale quantizing, René-style clocking from LFOs or dust, and a two-oscillator master clock.
- **Modulation**: two LFOs, dust, an 8-slot matrix and 4 macros with 8 destinations each (curves and windows).
- **Buses**: a stereo delay (spread, wobble, freeze), a space reverb (motion, diffusion, low cut), a feedback bus (filter, comb, smear, shift, fold or crush, returning to the master or into a track), a filter pair (low, band or high pass each; series, parallel or feedback, with two LFOs), an 8-band vocoder (its body is dust, drops, noise, the tape or a track; attack, release, shift, width), and master drive with microcuts and punch-in effects on the keys. Each bus page shows the current track's send into it.
- **Song**: patterns A and B per track, 16 scenes, a 32-row arrangement, mute and solo, tap tempo, 8 project slots.

New here? Open the emulator ([Opening it](#)), load a demo, press Play, then read [The five moves](#). Everything else is reference.

Contents

The manual

1. Opening it
2. The panel
3. The five moves
4. How the parts connect
5. HOME: tracks and influence
6. EDIT: the voice
7. ENV: articulation
8. LFO: modulation and macros
9. FX: the buses
10. SCL: scale
11. ARP: the tape
12. SEQ: steps and the graph
13. GLO: song, scenes and clock
14. SAVE: projects
15. Hold layers (every button held)
16. Recording
17. Recipes, step by step
18. Quick reference
19. Questions people ask

On the FM-1: Installing · If the FM-1 will not start

Everything below works the same in the browser emulator and on the FM-1. The pictures are the real screen, taken from the simulator.

1. Opening it

In a browser. Open `ravel-emulator.html` . It is one file, works offline and needs no install. Click anywhere or press a key once to start the sound; browsers stay silent until you do.

The emulator page has three parts:

- **The left panel (the workbench)** is a set of shortcuts:
- pick a demo and press **Load**;
- **Play** and **Record**;
- **T1-T8** pick a track;
- **Sound** chooses the track's kind, engine and a preset;
- **Go to** jumps straight to a section;
- **Catch** and **Resample** for the tape;
- **Audio in** plays a file into the input;
- **Output** has a level meter and the volume.
- **The FM-1 in the middle** is the instrument itself. Everything in this manual is done there.
- **The Controls guide and Eight tracks** below are short reminders and a level meter for each track. Click a track card to select it; **M** mutes it.

Using the emulator's controls:

To	Do this
Turn a knob or encoder	Drag it up or down, or scroll on it
Press a button	Click it
Hold a button (for the hold layers)	Right-click or shift-click it; it stays held (lit) until you click it again. Esc lets go of everything.
Play keys	Click or touch them, or use the computer keys A W S E D F T G Y H U J K O L P ; ' (A is middle C, the 5th white key)
Octave	[and]
Start or stop	Space
Pick track 1-8	Number keys 1-8
Turn SELECT (next or previous page)	← / → arrow keys
Stop everything at once	Panic / stop all , top right

The page has a safety limiter, so nothing can reach your speakers or interface at full scale.

Volume starts at 70.

Projects you save in the emulator are kept in your browser, so they are still there next time on the same computer and browser.

On the FM-1. Install it with the web installer (see [Installing on the FM-1](#)). Everything works the same as in the emulator, with these differences:

- **MASTER** is the output volume (the emulator's Volume slider).
- **No audio input.** The FM-1's USB carries Ravel's sound *to* a computer (it shows up as an audio input named "Ravel FM-1" you can record), but nothing comes in. The INPUT tape source and the INPUT exciter are silent on the FM-1.
- **Saving pauses the sound for a moment**, because the code runs from the same flash the project is written to.
- **No Bluetooth.**

2. The panel




Control	What it does in Ravel
MASTER	Output volume
SELECT	Moves to the next or previous page of the section you are in
ALGORITHM	Picks the track you are working on, T1 to T8 . The keys play this track.
PRESETS	Browses the list that belongs to the page: sounds on most pages, patterns on SEQ, scenes on SONG, slots on SAVE, rows on TAPE, steps on GRAPH, routes on INFLUENCE. The footer tells you which.
KNOB 1-4	Change the four values in the row at the top of the screen, left to right
OCT- / OCT+	Move the keyboard down or up an octave. On SEQ pages they move between step pages (1-16, 17-32, ...).
10 section buttons	Each one opens a section (a group of pages). Tap it again for the section's next page.
PLAY	Starts and stops the sequencer
REC	Tap to arm recording on the current track; hold it for catch and resample
Keys	Play the current track, or act as steps, tape positions, scenes or switches depending on the page and on what you hold

The ten sections:

Button	Section	What lives there
HOME	Tracks	All eight tracks at a glance, and the influence grid
EDIT	Voice	The current track's sound: engine, source pages, pitch, filter, skin, insert, mix, sends
ENV	Articulation	How a note starts, holds and ends, and the 256-shape library
LFO	Mod	Mod matrix, LFO 1, LFO 2, dust, macros
FX	Buses	Delay, space, feedback, filter pair, vocoder, master
SCL	Scale	Root, scale, transpose, sieve
ARP	Tape	Capture, rows, and how a tape track plays the tape
SEQ	Steps	Steps, step timing and shape, track settings, direction, graph and playheads
GLO	Song	Mixers, scenes, arrangement, density arcs, clock
SAVE	Projects	Save, load, demos, new project

Section or layer? A quick **tap** (less than about half a second) opens the section. **Holding** a button and using keys or knobs while it is down turns it into a *layer* instead: SEQ held makes the keys steps, LFO held puts the macros on the knobs, and so on. When you use a button as a layer, letting go of it does not change the page. See [Hold layers](#).

Reading the screen

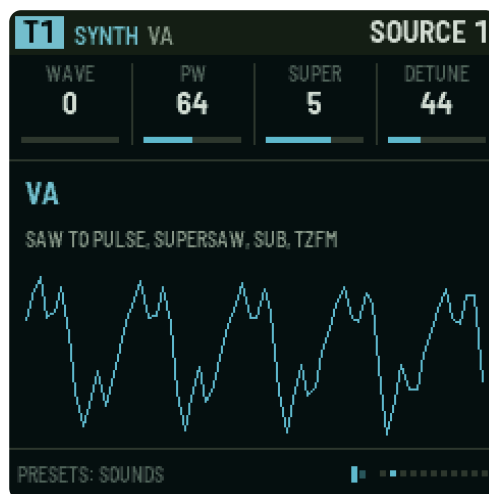

- **Top bar:**
- **left:** the track (T1-T8, coloured by kind: blue synth, orange strike, amber tape), its kind and engine;
- **right:** the page title.
- **Value row:** four names and values, which are always KNOB 1, 2, 3 and 4 in that order. A bar under each shows where it sits in its range; bipolar values have a centre mark. A value written as **-** means that knob does nothing on this page.

- **Picture:** what the page does, drawn live (a waveform, a filter curve, the step grid, the graph, the tape).
- **Footer:**
- **left:** what the controls do *right now*. It changes when you hold a button, so read it whenever you are unsure.
- **right:** small dots, one per page in the section, with the current one lit.
- **Also shown:** a play indicator while running, and a red dot when recording is armed.

Short messages ("CAUGHT", "PATTERN B", "SAVED TO 3") flash on the screen when something happens.

3. The five moves (how every page works)

Every page in Ravel works the same way:

1. **Press a section button** to open the section.
2. **Turn SELECT** (or tap the same button again) to walk its pages.
3. **Turn ALGORITHM** to choose which track you are editing.
4. **Turn KNOB 1-4** to change the four values shown.
5. **Turn PRESETS** to browse whatever the page holds.


Knobs speed up when you turn them quickly, so a fast turn crosses a whole range and a slow turn moves one step.

Pages appear and disappear. A section only shows the pages that apply to the current track:

- a VA synth has three SOURCE pages, FM has four;
- a tape track has no SOURCE pages but gets PLAYBACK, then MLR, BEADS or SLICES depending on its mode;
- the graph's HEAD pages only appear when the track is in GRAPH mode, and HEAD 2's pages only when head 2 is on.

So if a page seems to be "skipped", it is hidden because it does not apply to this track. Change the track or the setting and it comes back.

4. How the parts connect

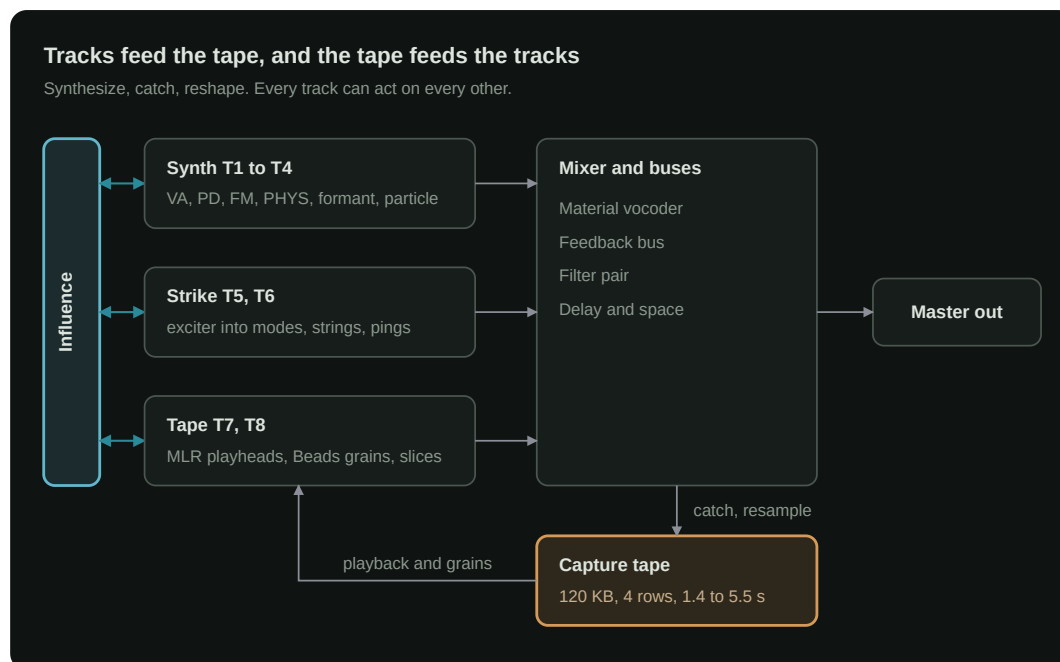

Ravel has **8 tracks**. Each track is one of three kinds, and any track can be any kind (HOME › TRACKS › KIND):

Kind	What it is	Default tracks
SYNTH	An oscillator voice with six engines: VA, PD, FM, PHYS, FORMANT, PARTICLE. Up to 4 voices.	T1-T4
STRIKE	An exciter hitting a resonant body: drums, metal, wood, rain on glass	T5-T6
TAPE	No oscillator. It plays the shared capture tape: MLR playheads, Beads grains, or slices.	T7-T8

How the sound flows:

1. **Each track** makes sound. On synth and strike tracks the sound goes: source → filter → skin (drive, fold, bits) → insert effect → articulation (the amplitude envelope) → level and pan.
2. **The mixer** adds the tracks together. Each track also **sends** some of its sound to the five **buses** (delay, space, feedback, filter pair, vocoder), and the buses return into the mix.
3. **The master** applies drive and microcuts, then a safety limiter, then goes to the output.
4. **The capture tape** is always listening. By default it hears the master, but it can hear one track, the buses or the audio input instead (ARP › CAPTURE › SOURCE). When you **catch** or **resample**, what it heard is kept, and the **tape tracks** play it back. That is the loop at the heart of Ravel: *synthesize → catch → rebuild*.
5. **Influence** connects tracks to each other. One track's notes or audio can trigger, modulate, excite, ring, clock or jump the tape of another (HOME › INFLUENCE).
6. **The sequencer** plays every track from its own pattern. The **modulation** (LFOs, dust, matrix, macros) moves parameters over time. **Scenes** and the **arrangement** switch patterns and states.

5. HOME: tracks and influence

TRACKS



The overview shows all eight tracks:

- each track's number and kind;
- a live level meter;
- how many voices it is using;
- along the bottom, the influence routes drawn as lines.

The current track is highlighted.

Knob	Value
1 LEVEL	Track volume, 0-127
2 PAN	-64 left to +63 right
3 KIND	SYNTH, STRIKE or TAPE. Changing it resets the track to that kind's defaults.
4 ENGINE	For synth tracks: VA, PD, FM, PHYS, FORMANT, PARTICLE

ALGORITHM picks the track; **PRESETS** loads a sound of the track's kind.

INFLUENCE



An 8 × 8 grid: rows are **sources**, columns are **targets**. Each filled cell is a route, coloured by type.

- 1. Turn **ALGORITHM** to the source track (its row is highlighted).
- 2. Turn **PRESETS** to the target column (the box moves along the row).
- 3. Turn **KNOB 1 (ROUTE)** to choose what the route does. An empty cell says "TURN K1 TO MAKE A ROUTE".
- 4. Set the other knobs. They change name to suit the route.

Route	What happens	KNOB 2	KNOB 3	KNOB 4
MOD	The source's envelope moves one of the target's parameters, every time the source plays	AMOUNT (±)	PARAM: which of the target's parameters	–
TRIG	Each note on the source also plays the target, with the same pitch	AMOUNT (below 0 plays the target softer)	DELAY: 0-16 steps later	CHANCE: 0–100 %
EXCITE	The source's audio feeds into the target's body or string (best into a strike or PHYS track)	AMOUNT	–	–
TAPE	Each source note jumps the target tape track's playhead	AMOUNT	JUMP TO: a position 0–15, or 16 = catch the tape	–
CLOCK	Each source note moves the target's sequencer one step (René-style: rhythm drives rhythm)	AMOUNT	–	–
RING	Ring modulates the target with the source's audio	AMOUNT	–	–



To remove a route, turn KNOB 1 back to **–**.


A trigger chain never plays the same track twice in one pass, so routes can form loops safely (T1 triggers T2, which triggers T1).

6. EDIT: the voice

All pages here act on the current track (ALGORITHM). **PRESETS** browses sounds for the track's kind on every voice page; the sound's name flashes on screen.

Page	KNOB 1	KNOB 2	KNOB 3	KNOB 4
SOUND	KIND	ENGINE	VOICES (mono, 2, 3, 4)	VELO: how much key velocity changes the level
SOURCE 1-4	the engine's own controls, see below			
PITCH	PITCH (± 24 semitones)	FINE (± 50 cents)	GLIDE	–
FILTER	FILTER type: LADDER, LOWPASS, BANDPASS, HIGHPASS, LPG	CUTOFF (Hz)	RESO	KEYTRK: the cutoff follows the note
SKIN	DRIVE (saturation)	FOLD (wavefolding)	BITS (bit reduction)	DEREZ (sample-rate reduction)
SKIN 2	BITMASK (digital grit)	VOCODER: this track's send into the vocoder bus	–	–
INSERT	INSERT effect: OFF, COMB, SHIFT, CRUSH, SMEAR	TUNE	AMOUNT	MIX
MIX	LEVEL	PAN	DELAY send	SPACE send
SENDS	FEEDBK send	PAIR send (filter pair)	VOCODER send	–

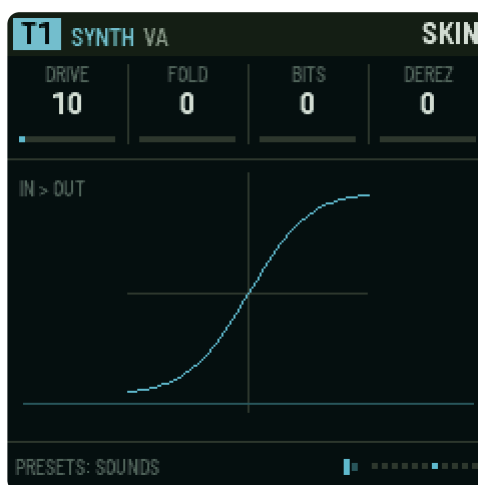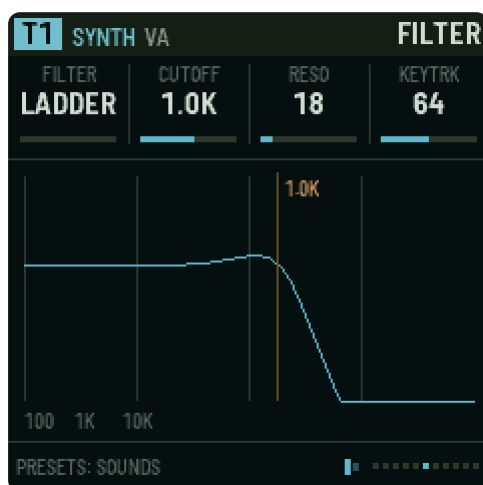

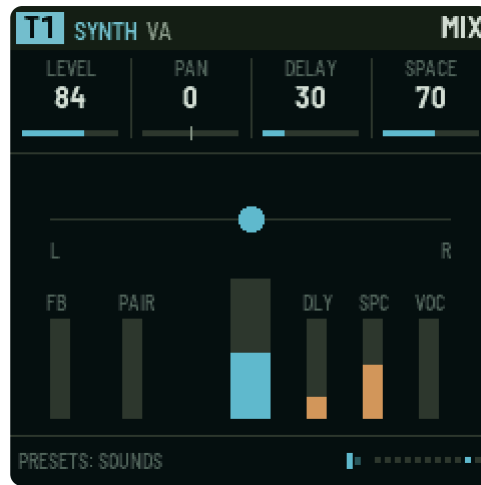

LPG is a low-pass gate: the filter closes as the note fades, so sounds get darker as they die away (good for plucks and Buchla-style bongos).

Changing **ENGINE** resets the SOURCE values to that engine's defaults. Use PRESETS to start from a finished sound instead.

The six synth engines (SOURCE pages)

VA (virtual analog): the familiar subtractive oscillator, and more.

SOURCE 1	SOURCE 2	SOURCE 3
WAVE: saw through to pulse	SUB: sub-oscillator level	SYNC: hard-sync sweep
PW: pulse width	NOISE level	DRIFT: slow analog wander
SUPER: 1-7 stacked oscillators (supersaw)	TZFM: through-zero FM depth	
DETUNE: spread of the stack	FMRATIO: modulator ratio (1/2 to 7)	

PD (phase distortion, after Casio CZ): a sine bent into other shapes. DCW is how bent it is, like a filter cutoff.

SOURCE 1	SOURCE 2
WAVE: SAW, SQUARE, PULSE, DBLSINE, SAWPULS, RES01-3	DCW ENV: how much the envelope opens DCW ($\pm$)
WAVE2: the second wave	DETUNE between the two
MIX of the two waves	FOAM: sideband fizz
DCW: the amount of distortion	RING: ring modulation of the two

The RES0 waves are the CZ's resonant shapes, which sound like a swept resonant filter with no filter.

FM: 4 operators.

SOURCE 1	SOURCE 2	SOURCE 3	SOURCE 4
ALGO: 12 routings (shown as 1>2>3>4 and so on; > means "modulates", + means "mixed")	RATIO3	LEVEL4	WAVE4
FEEDBK: operator 1 feedback	RATIO4	WAVE1	MOD DEC: how fast the modulators fade (the classic FM "pluck")
RATIO1	LEVEL2	WAVE2	TZFM: through-zero FM
RATIO2	LEVEL3	WAVE3	VEL MOD: velocity brightens the sound

Each operator can be SINE, TRI, SAW, SQUARE, HALF, ABS, QUART or BITS.

PHYS (physical modelling): a virtual instrument that you strike, bow or blow.

SOURCE 1	SOURCE 2
MODEL: STRING (plucked), BOWED, BLOWN, MEMBRAN (drum skin)	EXCITE: how hard it is played
BRIGHT: brightness of the excitation	INHARM: detunes the overtones (metallic)
DAMP: how quickly highs die	BODY: resonance of the body
POSITN: where it is struck or bowed	DECAY

FORMANT: vowels and voices.

SOURCE 1	SOURCE 2
VOWEL: sweeps A-E-I-O-U	BREATH: air in the voice
SHIFT: moves the formants (smaller or bigger "throat")	GLOTTAL: the shape of the pulse
WIDTH of the formants	SPREAD: stereo or choir spread
MODE: FILTER (a filter bank on a pulse) or FOF (grain-based, more vocal)	VIBRATO

PARTICLE: pulsars. Short bursts of a waveform at the note's pitch that can pull each other into sync.

SOURCE 1	SOURCE 2
TABLE: SINE, GLASS, REED, VOICE, BELL, BITS, NOISE, DROP	COUPLE: how strongly the emitters pull into sync
DUTY: burst length (short = buzzy, long = tonal)	MASK: drop bursts at random
EMIT: 1-3 emitters	FORMANT: the burst's own pitch
RATIO between emitters	SCATTER: timing randomness


Strike tracks (SOURCE pages)

A strike is an **exciter** (what hits) and a **body** (what rings).

SOURCE 1	SOURCE 2	SOURCE 3	SOURCE 4
EXCITER: CLICK, NOISE, METAL, FM, DUST, RAIN, BOW, BLOW, INPUT (the audio input)	DAMP	ORDER: how the modes are laid out	RING F: ring-mod frequency
BODY: PING (filters), MODAL (bars and bells), DISC (cymbals, plates), STRINGS (coupled strings)	INHARM: how un-harmonic the modes are	RATE: for DUST and RAIN, how often grains fall	RING amount
DECAY	GEOMTRY: the shape of the body	TRANS: level of the attack transient	P DROP: pitch drop at the hit (toms, kicks)
TONE: brightness	MODES: 2-8 resonances	T DECAY: length of the transient	SEED: a different random variation

With **INPUT** as the exciter, audio coming in rings the body (in the emulator, a file under Audio in; the FM-1 has no audio input).

7. ENV: articulation

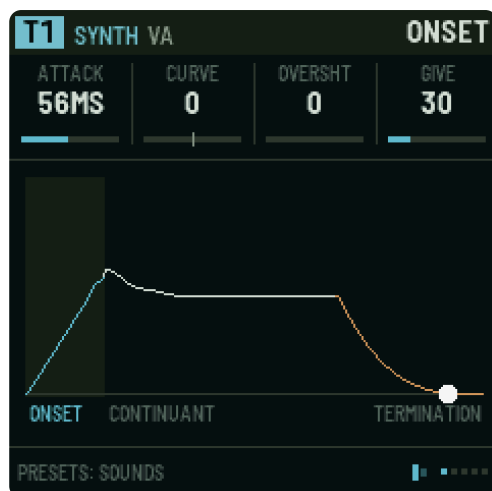


Ravel's envelope is in three stages, named after how speech is described: the **onset** (how a sound starts), the **continuant** (how it holds) and the **termination** (how it ends). The picture draws the shape as you turn the knobs.

Page	KNOB 1	KNOB 2	KNOB 3	KNOB 4
ONSET	ATTACK time (0.5 ms to 8 s)	CURVE: – is a fast swell, + a slow one	OVERSHT: the attack overshoots and settles (a "bite")	GIVE: a spring in the level. It lags and bounces instead of moving straight.
CONTINUANT	DECAY time	SUSTAIN level	LOOP: repeats the attack and decay while held (a rhythmic flutter; higher is faster)	VELO: velocity sensitivity
TERMINATION	RELEASE time	TAIL: a quiet tail after the release (room for reverbs to bloom)	ENV>CUT: how much the envelope opens the filter (±)	GIVE (the same spring)
DESTINATIONS	DEST 1: any parameter of this track	AMOUNT 1 (±)	DEST 2	AMOUNT 2 (±)

DESTINATIONS lets the envelope move up to two more parameters, such as FM's LEVEL2 or PD's DCW, so the timbre changes with the note.

LIBRARY


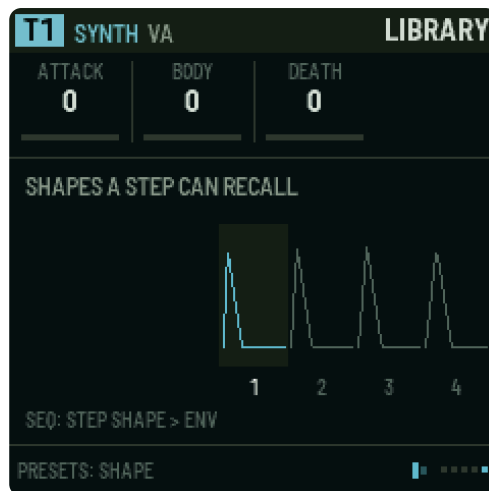


Ravel keeps **256 envelope shapes** that any step can recall, so one pattern can mix short, long and swelling notes on the same track.

- **PRESETS** browses the shapes; the picture shows the chosen one in the middle with its neighbours.
- **KNOB 1-3** edit the chosen shape: **ATTACK** (instant to slow swell), **BODY** (percussive to held), **DEATH** (cut short to long tail).
- Play the keys to hear the current track with that shape.
- To give a step a shape:
- go to **SEQ > STEP SHAPE** and set **ENV** to the shape's number (0 = the track's own envelope); or
- hold **SEQ** and **ENV**, hold the step's key, and turn **KNOB 1**.

8. LFO: modulation and macros

Page	Knob 1	Knob 2	Knob 3	Knob 4	PRESETS
MATRIX	SOURCE	TRACK (1-8, or the global one)	PARAM	AMOUNT (±)	slot 1-8
LF0 1	RATE	SHAPE: SINE, TRI, RAMP, SAW, SQUARE, S&H, DRIFT	-	-	-
LF0 2	RATE	SHAPE	-	-	-
DUST	RATE: how often random spikes happen	DECAY: how long each spike lasts	-	-	-
MACRO	DEST: what this slot moves	START value (±)	END value (±)	CURVE: LINEAR, EXP, LOG, S	which macro and slot
MACRO WINDOW	FROM %: where on the macro's travel this slot starts moving	TO %: where it stops	MACRO 1	MACRO 2	which macro and slot

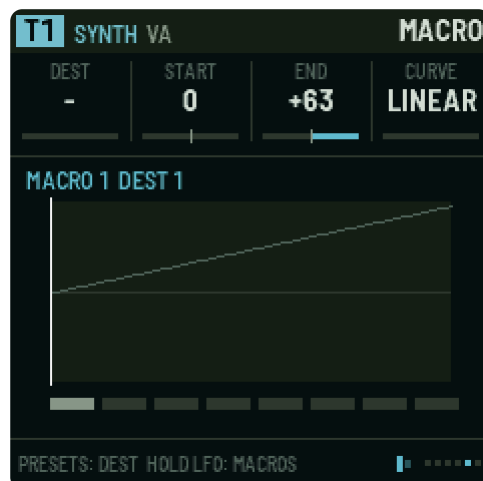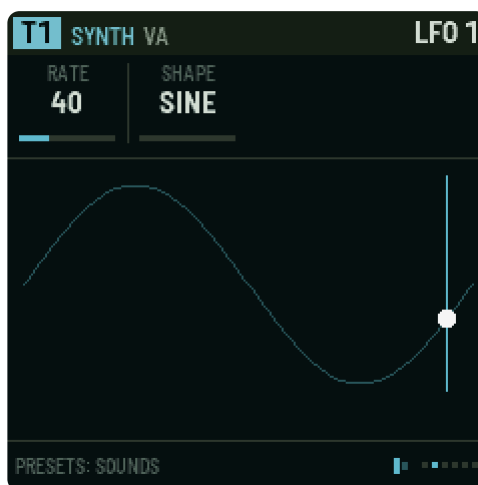

Matrix sources:

- LF01, LF02;

- **DUST:** random impulses, like crackle;
- **ENV and VELO:** the *target* track's own envelope and velocity;
- **MACRO1-4;**
- **CLOCK:** a pulse on every clock tick;
- **WHEEL:** reserved for MIDI; nothing drives it in this version.

The matrix: 8 slots, each "this source moves that parameter by this much".

1. Turn PRESETS to pick a slot.
2. Turn KNOB 1 to pick the source.
3. Turn KNOB 2 to pick the track.
4. Turn KNOB 3 to pick the parameter (only parameters that can move smoothly are offered).
5. Turn KNOB 4 to set the amount.

Macros: 4 macros, each moving up to 8 destinations at once. Each destination has its own start and end values, curve, and window (FROM % / TO %).

- The window lets one knob turn do several things in sequence. For example, macro 1 from 0 to 50 % opens a filter, and from 50 to 100 % adds feedback.
- PRESETS walks through 32 slots: macro 1's eight destinations, then macro 2's, and so on.
- **To play the macros**, hold **LFO** and turn KNOB 1-4: they are macros 1-4 on any page.

9. FX: the buses

Each track can send part of its sound into five shared effects (buses). Their outputs go back into the mix.

How the sends work.

- On every FX page, one knob is called **T1 SEND** (or T2, T3...): that is how much of the *current track* goes into this bus.
- Turn **ALGORITHM** to set another track's send without leaving the page.
- The other knobs on the page set the bus itself, which is shared by every track.
- The same sends are also on EDIT › MIX and EDIT › SENDS.

Page	KNOB 1	KNOB 2	KNOB 3	KNOB 4
DELAY	TIME: free below the middle, tempo-synced divisions above	FEEDBK	TONE: darker or brighter repeats	LEVEL
DELAY 2	T SEND	SPREAD: stereo ping-pong width	WOBBLE: tape wow and flutter	FREEZE: ON holds the repeats forever
SPACE	SIZE	DAMP: darker tail	LEVEL	T SEND
SPACE 2	MOTION: slow movement in the tail (chorus-like)	DIFFUSE: smooth wash vs. distinct echoes	LOW CUT: keeps the tail out of the bass	-
FEEDBACK	TIME of the loop	REGEN: how much goes round again	PROCESS inside the loop: FILTER, COMB, SMEAR, SHIFT, FOLD, CRUSH	AMOUNT of the process
FEEDBACK 2	TUNE of the process	CUTOFF of the loop's filter	EDGE: a guard that keeps the loop from running away	RETURN: to the MASTER, or into a track (T1-T8)
FEEDBACK 3	LEVEL	T SEND	-	-
FILTER PAIR	ROUTING: SERIES, PARALLEL, FEEDBACK	FREQ 1	FREQ 2	RESO
PAIR 2	TYPE 1: LOWPASS, BANDPASS, HIGHPASS	TYPE 2	LEVEL	T SEND
PAIR LFOS	LFO 1 rate (moves filter 1)	LFO 2 rate (moves filter 2)	DEPTH	-
VOCODER	BODY: what gets shaped (DUST, DROPS, NOISE, TAPE, or a track T1-T8)	TILT: darker or brighter	LEVEL	T SEND
VOCODER 2	ATTACK	RELEASE	SHIFT: moves the bands (± 24 semitones)	NARROW: sharper, more resonant bands
MASTER	DRIVE: master saturation	CUT SIZE: length of a microcut	REPEATS: how many times a microcut repeats	CUT MIX



The **vocoder** works backwards from a normal one.

- The tracks you **send** into it are the *voice*: their spectrum is measured in 8 bands.
- The **BODY** is the material that gets shaped by that spectrum.
- So T1's melody can be played on dust crackle, water drops, the tape, or another track's sound.
- The body is levelled band by band, so a quiet track works as well as a loud one. How loud the vocoder is follows the voice: the SEND, how hard the voice is played, and LEVEL.
- If a body track is also playing in the mix, turn its LEVEL down to hear only the vocoded version.

The **feedback bus** is a delay loop with an effect inside. Each pass goes through the effect again, so a comb rises into a ringing pitch, a shift climbs or falls, and a fold grows harsher.

- Send it into a track (**RETURN** T1-T8) and the loop feeds back through that track's own filter and skin.
- If it gets too loud, turn down REGEN or turn EDGE on.


Microcuts (MASTER page) are slivers of the master output, looped, reversed or stuttered. Trigger them from steps (SEQ > STEP SHAPE > CUT) or with the FX punch-ins.

Punch-in effects: hold **FX** and press white keys **1-8**:

Key	1	2	3	4	5	6	7	8
Effect	LOOP (microcut)	REVERSE	STUTTER	FREEZE the delay	LOW PASS sweep	HIGH PASS sweep	THROW: everything into delay and space	FILL: steps set to FILL play

The effects last while the key is held. Letting go of FX releases them all.

10. SCL: scale

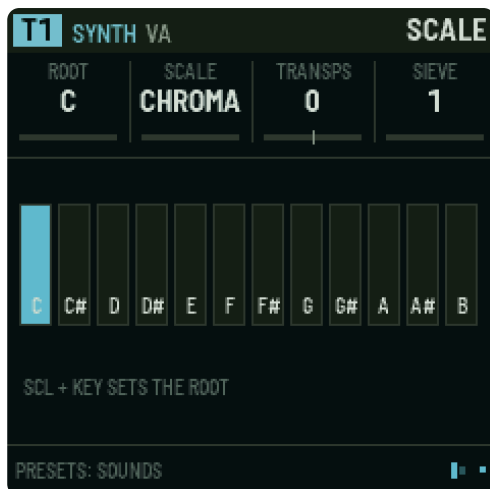

Knob 1	Knob 2	Knob 3	Knob 4
ROOT: C to B	SCALE: CHROMA (off), MAJOR, MINOR, DORIAN, PHRYG, LYDIAN, MIXO, PENTA, MINPENT, WHOLE, HIRAJO, IWATO	TRANSPS: transposes everything that plays from steps (± 24)	SIEVE: this track's note sieve (1-12)

- The scale corrects the notes that the **sequencer** plays. A note outside the scale moves down to the nearest scale note.
- **SIEVE** (per track): a track with sieve N only plays notes whose distance from the root divides by N. For example, sieve 12 keeps only the roots, sieve 7 keeps the root and every seventh semitone above it (the fifth, the ninth...), and sieve 2 keeps every other semitone. Copy one pattern to two tracks with different sieves and they split it between them.
- **Set the root from the keys:** hold **SCL** and press a key.

11. ARP: the tape

The tape is Ravel's memory: one short loop of audio that every tape track plays from.

- It is always **listening** to its source, a rolling recording of the last moment.
- When you **catch**, it stops listening and keeps what it heard. Now the tape tracks have something to play.
- **ARP** opens the TAPE section. If the current track is not a tape track, it jumps to the first tape track ("T7: THE TAPE TRACK").

How long is the tape? About 1.4 s in CLEAN quality, more in TAPE (12-bit), and about 5.5 s in DIRTY (8-bit μ -law at half rate). Choose on the CAPTURE page.

Getting sound onto the tape

To	Do this
Catch (keep what the tape just heard)	Hold REC , press OCT- . Or on any tape page, black key 9 . Do it again to let the tape listen again ("LISTENING").
Resample (record the next bars cleanly)	Hold REC , press OCT+ . Or black key 10 . On the next bar it records 1, 2, 4 or ½ bar (CAPTURE → RESAMPL) into row 1 , then catches.
Catch from a pattern	An influence TAPE route with JUMP TO = 16 catches when the source track plays



Page	KNOB 1	KNOB 2	KNOB 3	KNOB 4	PRESETS
CAPTURE	QUALITY: DIRTY, TAPE, CLEAN	SOURCE: MASTER, T1-T8, BUSES, INPUT	RESAMPL: 1 BAR, 2 BARS, 4 BARS, 1/2 BAR	ERODE: the tape wears a little each pass	row
ROWS	START of the row (0-127, in 128ths of the tape)	END of the row	IN GAIN: audio input level	INPUT: hear the input through the output	row 1-4
PLAYBACK (tape tracks)	MODE: MLR, BEADS, SLICE	ROW it plays	RATE: -2× to 4×	HEAD 2: a second playhead (+1/4, +1/2, +3/4 of the row, or REV)	sounds
MLR	JUMP: when a jump lands: NOW, STEP, BEAT, BAR	XFADE: smoothing at jumps	PITCH	LEVEL	sounds
BEADS	TIME: where in the row grains come from	SIZE of grains	SHAPE of grains	PITCH	sounds
BEADS 2	DENSITY	FEEDBK	MIX	RANDOM	sounds
SLICES	SLICES: 4-32	SENS: how easily a hit counts as a slice	PITCH	LEVEL	sounds

Rows. The tape is divided into four **rows**, which are windows onto the tape. By default row 1 is the whole tape, rows 2 and 3 are its first and second halves, and row 4 is its first eighth. A tape track plays one row at a time.

The three ways a tape track plays

MLR (named after the monome app). The current row is laid across the **16 white keys**.

Key	Action
Tap a white key	The playhead jumps to that sixteenth of the row and plays on (while the sequencer runs, on the next step, beat or bar, set by JUMP; stopped, at once)
Hold two white keys	Loops the span between them. Let go to play on.
Black keys 1–4	Switch to row 1, 2, 3 or 4
Black key 5	Reverse on/off
Black key 6	Half speed (press again to slow further, down to ¼)
Black key 7	Double speed (up to 4×)
Black key 8	Hold / release: stop and start the playhead
PLAY (stopping)	Stops the loops too; tap a key to start one again
Black keys 9 / 10	Catch / resample
From any other page	Hold ARP and press white keys to jump

The picture shows the whole tape, the four rows (the current one bright), the playhead(s) and "CAUGHT 1.4S" or "LISTENING".

BEADS: the Mutable Instruments granular engine, reading the tape.

- Keys play pitched grain clouds. While the sequencer runs, the cloud also plays on its own; when you stop, it fades out within a fraction of a second, and only the keys play it.
- TIME scans through the row, SIZE and SHAPE set each grain, DENSITY sets how many, and RANDOM scatters them.
- FEEDBK and MIX turn it into a smeared, blooming texture.

SLICE: the row is cut where it hits (onsets).

- Keys play slices from left to right, and so do steps.
- SENS sets how many hits count; SLICES sets the maximum.

Steps on a tape track jump the playhead: the step's note picks the position. A pattern on T7 can therefore cut the loop up rhythmically, and recorded MLR jumps become these steps (see [Recording](#)).

Audio in.

- In the emulator, choose a file under **Audio in**; "Record it onto the tape" sets the tape's source to INPUT. The FM-1 has no audio input in Ravel.
- Set SOURCE to INPUT to catch it, or use it as a strike exciter (EXCITER = INPUT).

12. SEQ: steps and the graph

Every track has its own sequencer, with **two patterns (A and B)** of up to **64 steps**.


- **PRESETS** switches pattern while on SEQ pages, and so do black keys **1** and **2**.
- **Black key 11** clears the pattern.
- Pattern changes while playing happen on the next bar.

The step keys

While you are on any SEQ page, or while you **hold SEQ** on any other page, the **16 white keys are steps**.

Action	Result
Tap a key	The step toggles on/off
Hold a key, turn a knob	Edits that step's value (on STEPS, STEP TIMING, STEP SHAPE, GRAPH)
Hold a key, turn a knob on a non-SEQ page (with SEQ held)	A parameter lock : that step plays with that value (cutoff, drive, a source value...). Up to two locks per step.
OCT- / OCT+	Step page 1-16, 17-32, 33-48, 49-64

Editing a held empty step switches it on.

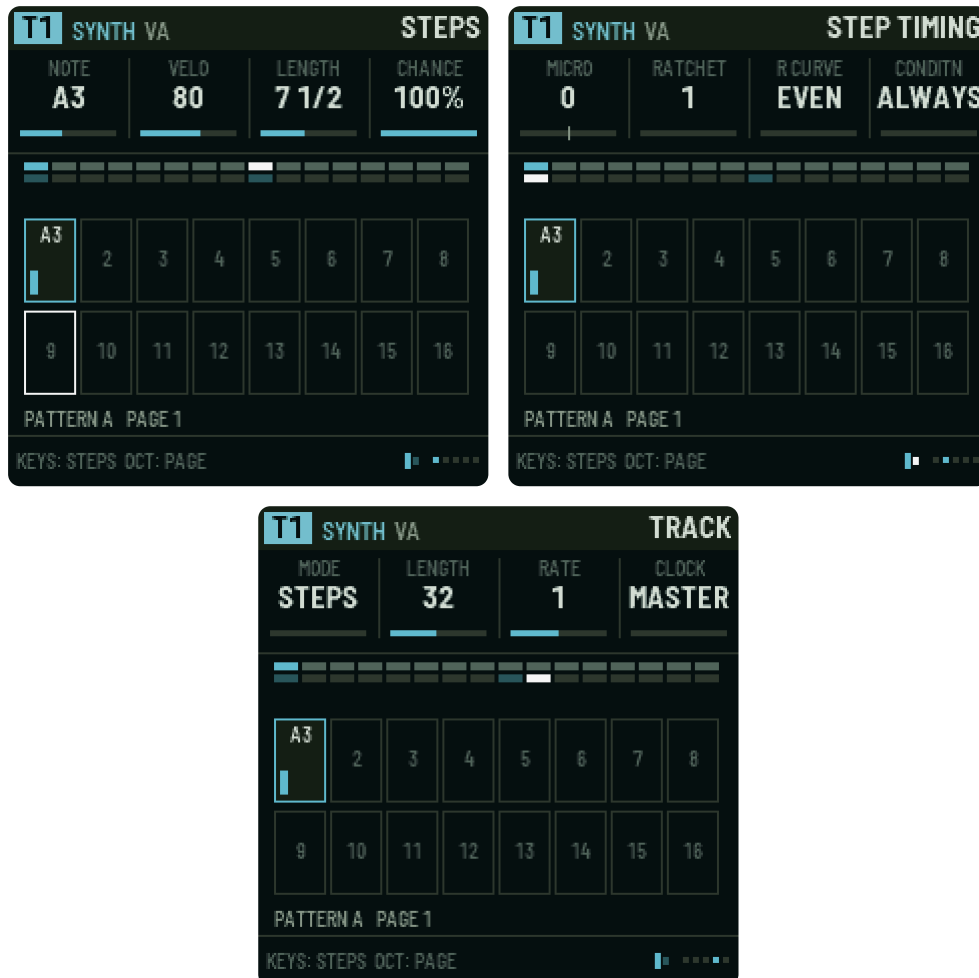

Page	KNOB 1	KNOB 2	KNOB 3	KNOB 4
STEPS	NOTE	VELO	LENGTH: in eighths of a step (8 = one step, "7 1/2")	CHANCE: 0-100 % that it plays
STEP TIMING	MICRO: nudge -6 to +12 (in 24ths of a step)	RATCHET: 1-8 repeats within the step	R CURVE: EVEN, FASTER, SLOWER; "-F" versions fade out	CONDITN, see below
STEP SHAPE	ENV: library shape (0 = the track's own)	CUT: NONE, LOOP, REVERSE, STUTTER (a master microcut on this step)	TIE: ON holds the note until the track's next note starts	-
TRACK	MODE: STEPS or GRAPH	LENGTH: 1-64	RATE: 1/4x to 4x the master clock	CLOCK: MASTER, LF01, LF02, DUST
DIRECTION (steps mode)	FWD, REV, PINGPONG, SNAKE (rows of four, walked back and forth)	-	-	-

Conditions (CONDITN) decide on which passes through the pattern a step plays:

- **ALWAYS**;
- **FIRST** (only the first time) and **NOT 1ST**;
- **1:2, 2:2** (first or second of every two passes);
- **1:3 ... 3:3**;
- **1:4 ... 4:4**;
- **FILL** (only while the FILL punch-in is held) and **NO FILL**.

CLOCK lets a track step by something other than the master clock:

- **LF01/LF02** step on each LFO cycle;
- **DUST** steps at random;
- an influence **CLOCK** route steps on another track's notes.

All of these give rhythms that drift against the grid.

On the STEPS picture:

- the top strip is the whole pattern, with the playing step bright;
- the grid is the current page of 16;
- each box shows the note and a velocity bar;
- outlined boxes are where the playheads are.

GRAPH mode (Silt's sequencer)



Set **SEQ** › **TRACK** › **MODE** to **GRAPH**. Now the steps sit in a circle, and each step has **cords** that say where a playhead goes next, instead of always moving to the following step. The pages after TRACK change to GRAPH, HEAD 1, HEAD 1 MOTION (and HEAD 2, HEAD 2 MOTION when head 2 is on).

Page	KNOB 1	KNOB 2	KNOB 3	KNOB 4	PRESETS
GRAPH	CORD A: the step to go to next (NEXT = just the following step)	CORD B: a second choice (NONE = no branch)	BRANCH: how to choose between A and B	HEAD 2: its role	step to edit
HEAD 1	ROLE: NOTES, GATE, PITCH	TRANSP: head 1's transpose	HEAD 2 role	-	-
HEAD 1 MOTION	SHAPE	DEPTH (±)	CYCLE: 2-64 steps	COMBINE: × CLOCK or + CLOCK	-
HEAD 2	PLAYS: THIS track, or T1-T8	H2 RATE	H2 START: the step it starts on	TRANSP	step
HEAD 2 MOTION	SHAPE	DEPTH	CYCLE	COMBINE	-

Making a graph:

1. Go to the GRAPH page.
2. Pick a step with **PRESETS**, or hold its white key.
3. Set **CORD A** (where it goes) and, if you want a branch, **CORD B**. The cords are drawn on the circle.
4. Choose **BRANCH**, which decides between A and B at a fork: - **CHANCE**: a coin toss; - **TURNS**: alternate each visit; - **LF01/LF02**: by the LFO's sign; - **MOTION**: by the head's function generator (above half way takes B).

Two playheads walk the same graph at once.

- **Head 1** plays this track.

- **Head 2** is off until you set its role (on GRAPH or HEAD 1). It has its own rate and start step, and can play **another track** (HEAD 2 > PLAYS).

Roles split a melody into its parts:

Role	What the head does on a step
NOTES	Plays the step normally
PITCH	Plays nothing; it only sets the pitch for the other head
GATE	Plays a note using the pitch the PITCH head last set

Set **head 1 to GATE** and **head 2 to PITCH** and you have rhythm and melody on two different paths at two different speeds, which never quite repeat the same way.

MOTION (Silt's function generators) moves a head's *speed* as it travels.

- **SHAPE:**
- RISE, FALL, ARCH, DECAY or SWELL, traced once every CYCLE steps;
- or LFO 1, LFO 2 or DUST, followed live.
- **DEPTH** sets how far it pushes; negative reverses the effect.
- **COMBINE** sets how it meets the clock:
- **× CLOCK** multiplies or divides the clock (up to two octaves faster or slower), so it accelerates and decelerates musically;
- **+ CLOCK** adds to the clock's rate (from slowing to a near halt up to racing).
- The MOTION picture draws the shape, where the head is on it, and its current speed in steps per pulse.

13. GL0: song, scenes and clock

T1 SYNTH VA

MIXER 1-4

LEVEL 84

LEVEL 96

LEVEL 96

LEVEL 100

1

2

3

4

5

6

7

8

PRESETS: SOUNDS

T1 SYNTH VA

SCENES

PLAYS SONG

TEMPO 104

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

WHITE KEYS LAUNCH ON THE BAR
HOLD SAVE + WHITE KEY TO STORE
BLACK 1-2: THIS TRACK'S PATTERN A, B

KEYS: LAUNCH SAVE+KEY: STORE

T1 SYNTH VA

ARRANGE

SCENE 1

BARS 8

ROWS 1

PLAYS SONG

1

PLAYS THE ARRANGEMENT (SONG)
NUMBERS ARE SCENES

PRESETS: ROW

Page	KNOB 1	KNOB 2	KNOB 3	KNOB 4	PRESETS
MIXER 1-4	T1 LEVEL	T2 LEVEL	T3 LEVEL	T4 LEVEL	-
MIXER 5-8	T5 LEVEL	T6 LEVEL	T7 LEVEL	T8 LEVEL	-
SCENES	PLAYS: PATTERN (you launch) or SONG (the arrangement runs)	TEMPO	-	-	scene
ARRANGE	SCENE for this row	BARS it lasts (1-64)	ROWS: how many rows the song has	PLAYS (as above)	row
ARCS	DENSITY of this bar (0-100 %) for the current track	-	-	-	bar 1-16
CLOCK	TEMPO (30-240)	SWING	B DOES: how oscillator B bends the clock	DEPTH of that bending	-
CLOCK B	A SHAPE: the main clock's wave	B RATE	B SHAPE	THRESH: where a pulse fires	-
CLOCK FEEL	TEMPO IS: LOCKED (keeps the average tempo) or FREE (drifts)	QUANTIZE: pulls microtiming back to the grid (0-100 %)	-	-	-

Scenes are snapshots of every track's pattern (A/B), levels, influence routes, mutes and macros.

- **Store:** hold **SAVE** and press a white key (1-16).
- **Launch:** on the SCENES page, press a white key. It changes on the next bar. Black keys 1-2 there switch the current track's pattern.

Arrangement: a list of up to 32 rows, each "play scene S for B bars".

1. Set **ROWS** to the number of rows the song needs.
2. Pick each row with **PRESETS** and set its SCENE and BARS.
3. Set **PLAYS** to SONG and press PLAY.

Density arcs. For each track, draw 16 bars of density.

- At 100 % every step plays. Lower values thin the part out, off-beats first and downbeats last.
- One pattern can then breathe across a phrase without writing new patterns.
- Pick the bar with PRESETS and the track with ALGORITHM.

The clock (after Silt's two-oscillator clock).

- Oscillator A is the tempo. **B DOES** lets a second, slower oscillator bend it:

B DOES	Effect
STEADY	No bending
RATE	Speeds up and slows down
SHAPE	Changes the swing-like shape
PHASE	Pushes and pulls the pulses
SUM	Adds the waves
AND, OR, XOR	Logic rhythms between the two

- With **DEPTH** at 0 the clock is straight.
- **TEMPO IS: FREE** lets it drift like an old drum machine.
- **Tap tempo:** hold **GLO** and tap black key **1**.
- **Mute and solo:** hold **GLO** and press white keys **1-8** to mute tracks 1-8, or **9-16** to solo tracks 1-8.

14. SAVE: projects



1. Press **SAVE** to open the page.
2. Turn **PRESETS** to choose a slot (1-8). The picture shows which slots are used and their names.
3. Turn **KNOB 1 (ACTION)**:

Action	What it does
SAVE	Saves the project to the slot
LOAD	Loads the slot
DEMO 1	The Ravel demo
DEMO 2	Dust
DEMO 3	The graph demo
INIT	A new, blank project

4. Press **SAVE** once: the footer says "PRESS SAVE AGAIN TO CONFIRM".
5. Press **SAVE** again to do it.

A project holds everything: all eight tracks and their patterns, influence, modulation, buses, scenes, the arrangement, arcs and the envelope library. **It does not hold the tape audio.** Catch or resample again after loading.

15. Hold layers

Hold a button (in the emulator: right-click or shift-click to latch it) and the keys or knobs do something else. The footer always shows the layer's hint.

Hold	Then	Does
SEQ	white keys	Steps, from any page. Hold a step and turn a knob to lock that value on that step.
SEQ + ENV	hold a step, turn KNOB 1	The step's library shape
LFO	KNOB 1-4	Macros 1-4
FX	white keys 1-8	Punch-ins: loop, reverse, stutter, freeze, low pass, high pass, throw, fill
ARP	white keys	Jump the tape track's playhead from any page
GLO	white keys 1-8 / 9-16, black 1	Mute / solo, tap tempo
SAVE	white key	Store scene 1-16
SCL	any key	Set the root
REC	OCT- / OCT+	Catch / resample



16. Recording

1. Choose the track with **ALGORITHM**.
2. **Tap REC**. "RECORDING ARMED" flashes and a red dot appears in the footer.
3. Press **PLAY**.
4. Now, while it plays: - **notes you play** are written into the steps, with their timing kept as microtiming; - **knobs you turn** are written as parameter locks on the playing step; - on a tape track in MLR, **jumps you make** are written as jump steps.
5. **Tap REC** again to stop recording.

Turning ALGORITHM while armed moves recording to the new track.

17. Recipes, step by step

Make a first sound

1. Turn **ALGORITHM** to T1.
2. Press **EDIT** (SOUND page). Turn **KNOB 2** to **PD**.
3. Turn **PRESETS** to hear PD's sounds; play the keys.
4. Turn **SELECT** to SOURCE 1. Turn **KNOB 4 (DCW)** to bend the sound brighter.
5. Press **ENV**. Turn **KNOB 1 (ATTACK)** for a slow swell and **KNOB 3 (OVERSHT)** for a bite.

Write a beat

1. Turn **ALGORITHM** to T5 (strike).
2. Press **SEQ**. Tap white keys **1, 5, 9, 13**. Press **PLAY**.
3. Hold key **13** and turn **KNOB 2 (VELO)** down for a softer hit.
4. **SELECT** to STEP TIMING. Hold key **9** and turn **KNOB 2 (RATCHET)** to 3 for a roll.
5. To lock a sound change on one step:
6. Press **EDIT**, **SELECT** to SOURCE 1.
7. Hold **SEQ**, hold key **5**, turn **KNOB 4 (TONE)**.
8. Let go. Only step 5 is brighter.

Catch and cut up a loop (MLR)

1. Get something playing (load DEMO 1, press PLAY).
2. Hold **REC**, press **OCT+** (resample). At the next bar, a bar is recorded into row 1.
3. Press **ARP**, which jumps to T7, a tape track. **SELECT** to PLAYBACK and set **MODE** to MLR.
4. Tap white keys to jump around the loop. Hold two keys to loop between them.
5. Press black **5** for reverse, **6** for half speed.
6. Tap **REC**, then jump around while it plays. Your jumps become a pattern.

Turn the tape into a cloud (Beads)

1. With something caught, **ALGORITHM** to T8. Press **ARP**, **SELECT** to PLAYBACK, **MODE** = BEADS.
2. **SELECT** to BEADS. Turn **SIZE** up, **DENSITY** up (BEADS 2) and **RANDOM** up a little.
3. Play keys: pitched clouds of the loop.

Two-headed graph melody

1. **ALGORITHM** to T1. **SEQ**, switch some steps on with different **NOTES** (hold a key, turn **KNOB 1**).
2. **SELECT** to TRACK, **MODE** = GRAPH.
3. GRAPH page: pick step 4 with **PRESETS**, set **CORD A** = 1 (it loops back), **CORD B** = 8 (or branches ahead), **BRANCH** = TURNS.
4. HEAD 1: **ROLE** = GATE, **HEAD 2** = PITCH.
5. HEAD 2: **H2 RATE** = 2/3, **H2 START** = 5.
6. HEAD 1 MOTION: **SHAPE** = ARCH, **DEPTH** = +32, **CYCLE** = 16. The rhythm speeds up and slows down over 16 steps while the melody walks its own path.

Put reverb on just one track

1. **ALGORITHM** to the track. Press **FX**, **SELECT** to SPACE.

2. **KNOB 4** (**T3 SEND** , for example) up. The other tracks' sends stay where they were.
3. **SPACE 2**: raise **MOTION** for a moving tail and **LOW CUT** to keep it out of the bass.

One track plays another

1. **ALGORITHM** to T5 (the source). Press **HOME**, **SELECT** to **INFLUENCE**.
2. **PRESETS** to column 2, T2 (the target). **KNOB 1** = **TRIG**, **KNOB 3 (DELAY)** = 2, **KNOB 4 (CHANCE)** = 60.
3. Now 60 % of T5's hits also play T2 two steps later.

Save your work

1. **SAVE**, **PRESETS** to a slot, **KNOB 1** = **SAVE**.
2. Press **SAVE**, then **SAVE** again.

18. Quick reference

I want to...	Press / turn
Pick a track	ALGORITHM (emulator: 1-8)
Next page	SELECT, or tap the section button again
Change a sound	PRESETS on any EDIT page
Start / stop	PLAY (emulator: Space)
Turn steps on	SEQ, tap white keys
Edit one step	Hold its key, turn knobs
Lock a value on a step	Hold SEQ + step, turn a knob on any page
Pattern A / B	Black key 1 / 2 on SEQ, or PRESETS
Catch the tape	Hold REC + OCT-
Resample a bar	Hold REC + OCT+
Jump the tape from anywhere	Hold ARP + white key
Mute / solo	Hold GLO + white 1-8 / 9-16
Tap tempo	Hold GLO + black 1
Store a scene	Hold SAVE + white key
Launch a scene	GLO › SCENES, white key
Play macros	Hold LFO, turn KNOB 1-4
Punch-in effects	Hold FX + white 1-8
Record	Tap REC, then PLAY
Save	SAVE, choose slot and action, SAVE twice

19. Questions people ask

A page I saw before is gone.

- It only shows when it applies. SOURCE 3 and 4 depend on the engine. MLR, BEADS and SLICES depend on the tape mode. The graph's HEAD pages appear only in GRAPH mode, HEAD 2's only when head 2 is on.
- Holding LFO does not change pages: it puts the macros on the knobs.

The FX page changes a value for every track.

- Only the knob named **T_ SEND** is per track. Everything else on a bus page is the shared effect.

The tape track is silent.

- The tape has to hold something: catch (REC + OCT-) or resample (REC + OCT+).
- In MLR, tap a white key on the TAPE page to start the playhead (black 8 starts and stops it).
- Check its LEVEL and that the row is not tiny (ROWS page).

The graph doesn't seem to do anything.

- Check SEQ > TRACK > MODE is GRAPH.
- Steps need to be on (tap them).
- With no cords, each step just goes to the next one, so it sounds like a normal sequence until you add cords or branches.

Something got loud or stuck.

- Press **Panic / stop all** (emulator), or stop and start.
 - High FEEDBACK REGEN and delay FEEDBK can build up; the master limiter stops it reaching your speakers.
-

Installing on the FM-1

Ravel has not been tested on FM-1 hardware yet. Installing it is at your own risk.

1. Open Ravel's site (the repository's GitHub Pages: the emulator) in Chrome or Edge on a computer, and press **Install on FM-1** at the top.
2. Connect the FM-1, switched on, directly to the computer with a USB data cable.
3. Press **Install**, allow MIDI when the browser asks, and wait until it says it is done. Don't unplug part way. The FM-1 restarts into Ravel.

From the command line instead (`pip3 install mido python-rtmidi`): `python3 tools/fm1_install.py Ravel-FM1.fwsc` . The `.fwsc` is on the site (`firmware/Ravel-FM1.fwsc`) and on the repository's releases.

The installer works from M-VAVE's own firmware, from Ravel, and from the other community firmwares. **To go back**, the same page writes M-VAVE's own FM-1 firmware (which you download from M-VAVE) back over the same cable; M-VAVE's own updater, M-UPGRADE, works too.

If the FM-1 will not start

- **Hold OCT- and OCT+ for 5 seconds** while Ravel runs: the FM-1 goes into its update mode, and the installer can write any firmware.
- **Safe mode:** if Ravel crashes twice while starting, it starts in a safe mode instead: no sound, USB on, so the web installer can reach it. PLAY tries Ravel again.
- **Calibration:** hold OCT- and OCT+ while switching on to teach Ravel which button and knob is which, if the panel seems mixed up.
- **Last resort:** if nothing shows on the screen but the FM-1 appears on USB in the chip's update mode, `tools/fm1_rescue.sh` (from XOX) puts M-VAVE's firmware back from a Mac. Beyond that, recovery needs the **FM-1-transporter**.

Licence

GPL-3.0 only (see `LICENSE`). The FM-1 platform layer, loader, installer and tools are Felucca's and XOX's (GPL-3.0). The Beads port keeps Mutable Instruments' MIT licence. A firmware package also contains three files of JieLi's AC79 SDK (Apache-2.0). Third-party code is listed in `THIRD_PARTY.md` .

Credits

- Mutable Instruments (Émilie Gillet) for Beads.
- **Felucca** by Leo Kuroshita (@kurogedelic), Hügeltön Instruments: the FM-1's open hardware layer, USB, storage, update loader and web installer that Ravel runs on.
- **XOX**, a Felucca fork, for the platform as Ravel takes it, the simulator's design, its PNG writer and the build, install and rescue tools.
- The authors of JIANT, SLOOP and sloopDX, and everyone who mapped the FM-1.

